

Atkinson Tanktop

The Atkinson Tanktop has the following components built in:

1. Floating suction pipe.
 2. No-return valve.
 3. Serviceable/replaceable Filter.
 4. Anti-siphon valve.
 5. 10mm push fit connection.
- (There is no need for a control valve as the anti-siphon valve closes when the burner pump is inoperative).

Fitting Instructions:

The Atkinson Tanktop is fitted through a 33mm hole in the top of the tank or through a 1" BSPP port.

Fitting to a tank with 33mm hole:

(Ensure the hole is in reach of an inspection cover on the tank).

- Remove the 1" backing nut from the underside of the valve.
- Pass the float and suction pipe through the 33mm hole.
- Retrieve the suction pipe via the inspection hatch.
- Fit and tightening the 1" nut so that the outlet points in the desired direction.

Fitting to a tank with 1" BSPP port:

- Pass the float and suction pipe through the 1" port.
- Screw the Tanktop into the 1" thread.
- Use the Locking nut to orientate the outlet to point in the desired direction, nip the nut down onto the 1" tank port.

Finally:

- Cut the 10mm oil line (Using a tube cutter NOT a hacksaw) to the required length and push into the outlet connection.

