
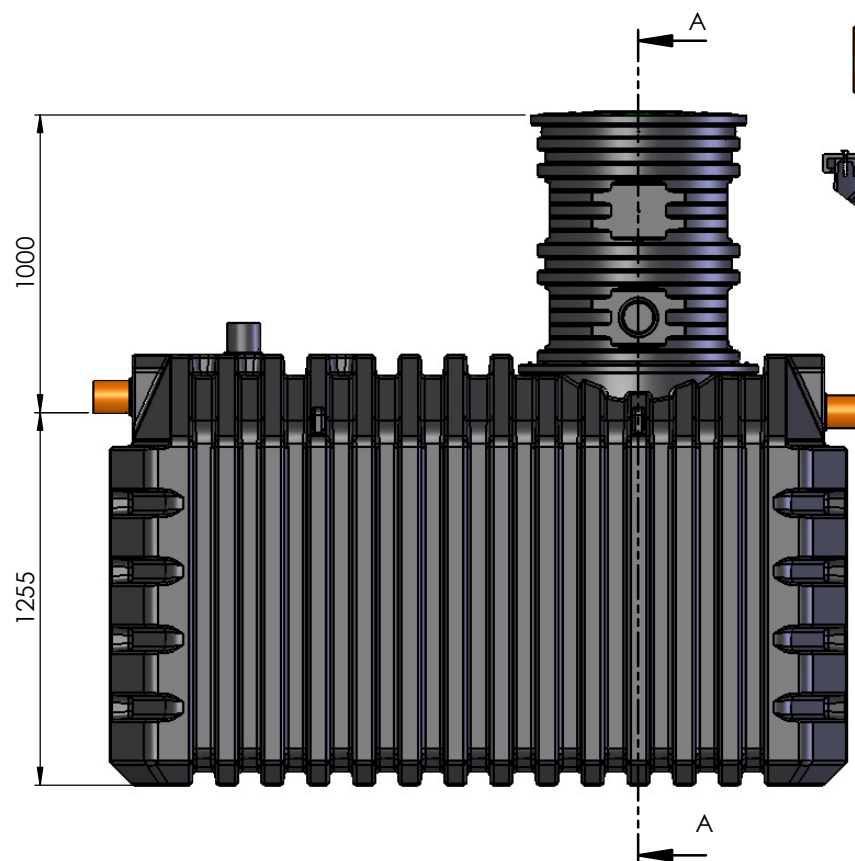
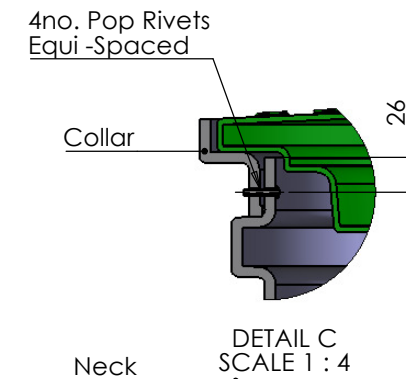



Neck Trimming Procedure:

1. Determine Inlet Invert required on site.
2. Remove pedestrian duty lid with keys provided.
3. Remove rivets securing collar to neck - Drill out.
4. Trim polyethylene neck using appropriate cutting tool in required position to suit invert required.
5. Position collar on neck and secure in place using 4no. rivets equi-spaced around collar.

Neck Trim Positions from 1000mm to 500mm Invert

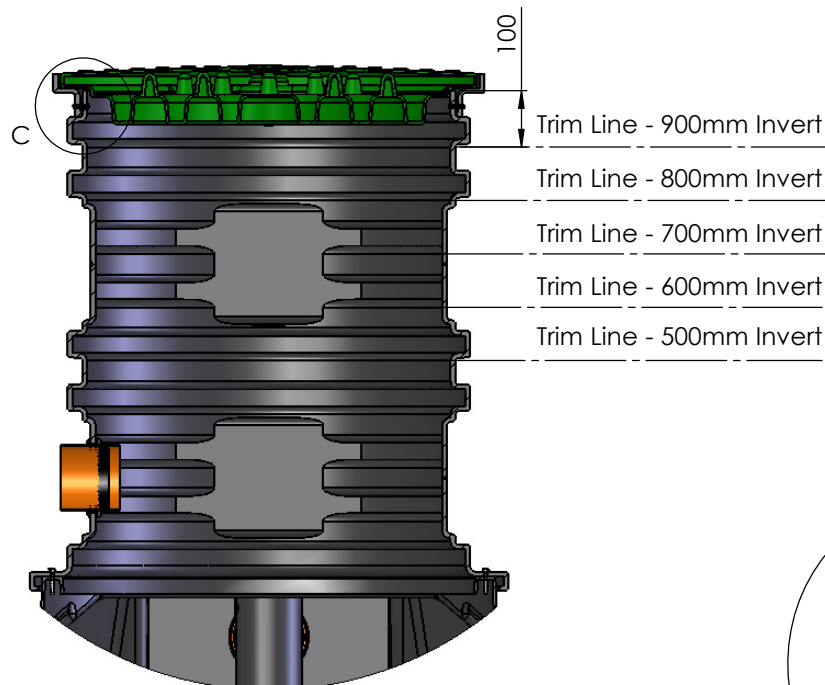

DETAIL B
SCALE 1 : 9

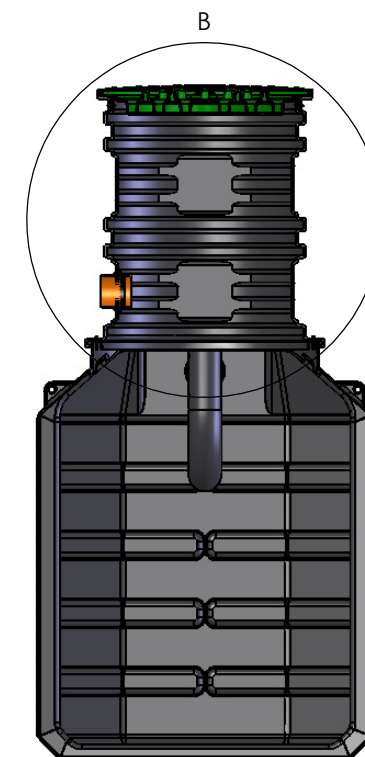

SECTION A-A
SCALE 1 : 18

Drawing : DS1261P

Page 1 of 1

GAMMA Septic Neck Trimming Details

All dimensions in mm

Scale: Not to scale

Kingspan Environmental reserve the right to alter the details of this drawing without prior notice. This drawing is copyright and may not be reproduced or used without the written permission of Kingspan Environmental.

